

NO.	Printer List		Unavailable Function
Manufacturer	Brand	Printer Model	
1	Avision	MF3100L	
2	Benq	CM3000	
3	Brother	MFC-210C	
4	Brother	MFC-420CN	
5	Brother	MFC-3240C	
6	Brother	MFC-7220	
7	Canon	PIXMA MX318	
8	Canon	PIXMA MX308	
9	Canon	PIXMA MP520	
10	Canon	PIXMA MP145	Can't use Canon MP Navigator 3.1 to execute the Scan and Copy
11	Canon	PIXMA MP110	
12	Canon	PIXMA MP150	
13	Canon	PIXMA MP160	Can't use Canon MP Navigator 3.0 to execute the Scan and Copy
14	Canon	PIXMA MP170	
15	Canon	PIXMA MP180	Can't use Canon MP Navigator 3.0 to execute the Scan and Copy
16	Canon	PIXMA MP450	
17	Canon	PIXMA MP460	
18	Canon	PIXMA MP500	
19	Canon	PIXMA MP510	
20	Canon	PIXMA MP530	
21	Canon	PIXMA MP600	Can't use Canon MP Navigator 3.0 to execute the Scan and Copy
22	Canon	PIXMA MP810	
23	Canon	PIXMA MP830	
24	Canon	PIXMA MP950	
25	Canon	PIXMA MP960	
26	Canon	MP198	
27	Canon	MP268	
28	Dell	Photo 926	
29	Dell	Photo 966	
30	EPSON	PM-A970	
31	EPSON	PM-A920	
32	EPSON	PM-A820	
33	EPSON	PM-A720	
34	EPSON	PM-A950	
35	EPSON	PM-A890	
36	EPSON	PM-A750	
37	EPSON	PM-A650	
38	EPSON	Stylus CX7300	
39	EPSON	Stylus CX8300	
40	EPSON	Stylus CX5500	

NO.	Printer List		Unavailable Function
Manufacturer	Brand	Printer Model	
41	EPSON	Stylus CX9300F	
42	EPSON	Stylus CX2900	
43	EPSON	Stylus CX3700	
44	EPSON	Stylus CX3900	
45	EPSON	Stylus CX4100	
46	EPSON	Stylus CX4700	
47	EPSON	Stylus CX4900	
48	EPSON	Stylus CX5700F	
49	EPSON	Stylus CX5900	
50	EPSON	Stylus CX6900F	
51	EPSON	Stylus Photo RX690	
52	EPSON	Stylus Photo RX530	
53	EPSON	Stylus Photo RX580	
54	EPSON	Stylus Photo RX590	
55	EPSON	Stylus Photo RX630	
56	EPSON	Stylus Photo RX650	
57	Fuji Xerox	WorkCentre 3119	
58	HP	Diskjet F2180	
59	HP	Diskjet F4185	
60	HP	Deskjet F380	
61	HP	Deskjet F4280	
62	HP	PSC1315	
63	HP	Photosmart C5280	
64	HP	Photosmart 2575	
65	HP	Photosmart C4280	
66	HP	Photosmart C1350	
67	HP	Photosmart C1610	
68	HP	Photosmart C3180	
69	HP	Photosmart C4180	
70	HP	Photosmart C5180	
71	HP	Photosmart C5380	
72	HP	OfficeJet 4255	
73	HP	OfficeJet 4355	
74	HP	OfficeJet 5510	
75	HP	OfficeJet 5610	
76	HP	OfficeJet 6110	
77	HP	OfficeJet 7210	
78	HP	Officejet J4580	
79	HP	LaserJet 3050	
80	Lexmark	x3470	

NO.	Printer List		Unavailable Function
Manufacturer	Brand	Printer Model	
81	Lexmark	x5470	
82	Samsung	SCX4321	
83	Samsung	SCX-4100	
84	Samsung	SCX-4200	
85	Avision	MF3100L	
86	Benq	CM3000	Driver not available
87	Brother	MFC-210C	
88	Brother	MFC-420CN	
89	Brother	MFC-3240C	
90	Brother	MFC-7220	
91	Canon	PIXMA MX318	
92	Canon	PIXMA MX308	
93	Canon	PIXMA MP520	
94	Canon	PIXMA MP145	Navigator 3.1 to execute the Scan and Copy
95	Canon	PIXMA MP110	
96	Canon	PIXMA MP150	
97	Canon	PIXMA MP160	Navigator 3.1 to execute the Scan and Copy
98	Canon	PIXMA MP170	
99	Canon	PIXMA MP180	Navigator 3.1 to execute the Scan and Copy
100	Canon	PIXMA MP450	
101	Canon	PIXMA MP460	
102	Canon	PIXMA MP500	
103	Canon	PIXMA MP510	
104	Canon	PIXMA MP530	
105	Canon	PIXMA MP600	
106	Canon	PIXMA MP810	
107	Canon	PIXMA MP830	
108	Canon	PIXMA MP950	
109	Canon	PIXMA MP960	
110	Canon	MP198	
111	Canon	MP268	
112	Dell	Photo 926	
113	Dell	Photo 966	
114	Epson	PM-A970	
115	Epson	PM-A920	
116	Epson	PM-A820	
117	Epson	PM-A720	
118	Epson	PM-A950	
119	Epson	PM-A890	
120	Epson	PM-A750	

NO.	Printer List		Unavailable Function
Manufacturer	Brand	Printer Model	
121	Epson	PM-A650	
122	Epson	Stylus CX7300	
123	Epson	Stylus CX8300	
124	Epson	Stylus CX5500	
125	Epson	Stylus CX9300F	
126	Epson	Stylus CX2900	
127	Epson	Stylus CX3700	
128	Epson	Stylus CX3900	
129	Epson	Stylus CX4100	
130	Epson	Stylus CX4700	
131	Epson	Stylus CX4900	
132	Epson	Stylus CX5700F	
133	Epson	Stylus CX5900	
134	Epson	Stylus CX6900F	
135	Epson	Photo RX690	
136	Epson	Photo RX530	
137	Epson	Photo RX580	
138	Epson	Photo RX590	
139	Epson	Photo RX630	
140	Epson	Photo RX650	
141	Epson	Photo RX690	
142	Fuji Xerox	WorkCentre 3119	
143	HP	DeskJet F2180	
144	HP	DeskJet F4185	
145	HP	Deskjet F380	
146	HP	Deskjet F4280	
147	HP	HP PSC1315	
148	HP	Photosmart C5280	
149	Lexmark	x3470	
150	Lexmark	x5470	
151	Samsung	SCX-4321	
152	Samsung	SCX-4100	
153	Samsung	SCX-4200	